Readme Daily
USER GUIDE

Important: Please charge the Reader using the supplied charger for at least 10 hours before using it for the first time.

1 WELCOME

Thank you for purchasing our product! *Readme Daily* has been developed using the latest technology. This product features a large memory, color LCD TFT display and lightweight portability.

You can use the Reader to:

- *Read eBooks*
- *Listen to music while reading*
- *Watch videos*
- *Store files and documents*

Please read this user guide carefully before using the product so that you can fully enjoy its performance and functions. We hope you enjoy using our product.

2 IMPORTANT

Please RESPECT COPYRIGHT. Binatone is not liable for any infringement of copyright arising from the use of pirated content.

3 WHERE CAN I GET eBOOKS FOR MY READER?

An eBook, which is short for electronic book is essentially the digital version of a paper book.

The Reader supports eBooks in several formats, such as TXT, PDF, HTML, CHM, RTF, FB2, EPUB, WORD, TCR, PAML DOC., OPEN E-BOOK, OPEN READER, MOBI, etc. eBooks can be downloaded with a computer via an Internet connection.

You can download eBooks in various formats from Online ebook stores such as:

- Waterstones - http://www.waterstones.com
- Project Gutenberg - http://www.gutenberg.org/wiki/Main_Page
- The Burgomeister's Books - http://truly-free.org/
- MemoWare - http://memoware.com/

Note

We strongly recommend that you download eBooks only from reliable and secure websites. Always check with the store before making your purchase, otherwise, you could end up paying for eBooks which you are unable to read.

4 WHAT IS DIGITAL EDITIONS?

Digital Editions offers an engaging way to view and manage eBooks and other digital publications. You can use it to download and purchase digital content, which can be read both online and offline, transfer copy-protected eBooks from your computer to other computers or devices, organise your eBooks into a custom library and annotate pages.

IMPORTANT
When you copy DRM books from the computer to the Reader, a *manifest.xml file* will be created automatically. Do not delete the *manifest.xml* file as it is stores the copyright information of the eBook and allows you to open the eBook on the Reader.

4.1 Installing Digital Editions on your computer

You can install **Digital Editions** on your computer in a number of different ways.

You may be prompted to install **Digital Editions** when you purchase an item from an online store, such as **www.waterstones.com**. In this case, installation is part of the download process. The following is an example:

1 After you have purchased an item from the online store, click on the download link.

2 Your browser may prompt you for the application to open the file (which is a license for the eBook and not the eBook itself).

3 Select '**Digital Editions**' if prompted and choose to open the file.

4 **Digital Editions** should load if not already loaded.

5 **Digital Editions** will load the license file, download the eBook and add it to your library.

6 Plug in your eBook Reader if not already plugged in, using the supplied USB cable. See *"Transferring files from your computer to the eBook Reader" on page 17* on how to connect your eBook Reader to the computer.

7 Copy the eBook(s) to your eBook Reader by dragging and dropping them from the '**Library view**' onto the **U-Disk** in the left hand panel.

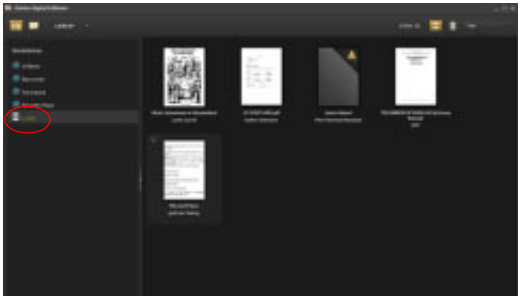

8 If the eBook is large, a progress bar may appear as the eBook is being copied.

9 Exit **Digital Editions**.

10 Once **Digital Editions** is closed, press **OK** on your eBook Reader and disconnect the USB cable.

11 Your eBook is now loaded to your eBook Reader and can be read.

Another way is to download it from the Internet.

1 Click the **Install** button.

Hint:
If the buttons says **Launch** instead, then you have already installed **Digital Editions**; you may click the **Launch** button to open **Digitial Editions** directly.

2 Click **Install** again.

Digital Editions Installer
This application can read and write files to your system. Would you like to continue installing?
Install
Cancel
Installing applications may present a security risk to you and your computer. Only install from sources that you trust.

3 Click **Yes**.

4 Wait for **Digital Editions** to finish downloading.

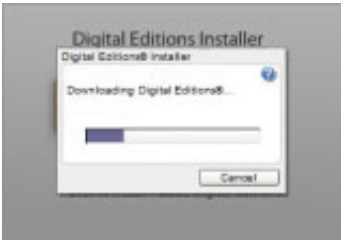

5 Click "**I Agree**".

6 Click "**Launch**".

7 This will launch your **Digital Editions**.

4.2 Authorising Your Computer

You can view your DRM-protected eBooks on more than one computer, if you have authorised all the computers on which you want to read them. After you have installed **Digital Editions**, authorising your computer is optional but highly recommended.

DRM-protected files are tied to you, who is the purchaser. If you authorise your computer before you download the DRM-protected book, then **Digital Editions** will tie the book to your **Digital Editions** account. You can authorise up to 6 different computers or devices

and copy your DRM-protected books between them. But if you did not authorise your computer before you download the book, then **Digital Editions** will tie the book to your specific computer. If you buy another computer later on, or even if you reinstall **Digital Editions** again, you will not be able to access any books you have already downloaded.

4.2.1 How do I authorise my computer?

The first time you run **Digital Editions** after installing it, the software will automatically help you authorise your installation. You will need an ID; if you do not have one, you can click on **get an ID online** to create one. Enter the email address associated with your ID and your password, then click "**Activate**".

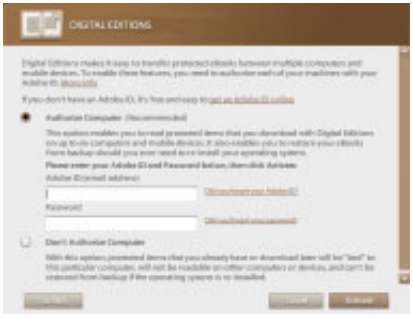

If you have already installed **Digital Editions** and skipped authorising your computer, you can still authorise it at any time by running **Digital Editions** and selecting **Authorise Computer** from the **Library** menu:

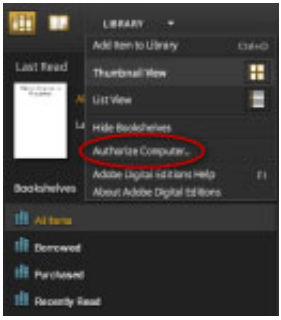

5 WHAT'S IN THE BOX?

The product pack includes:

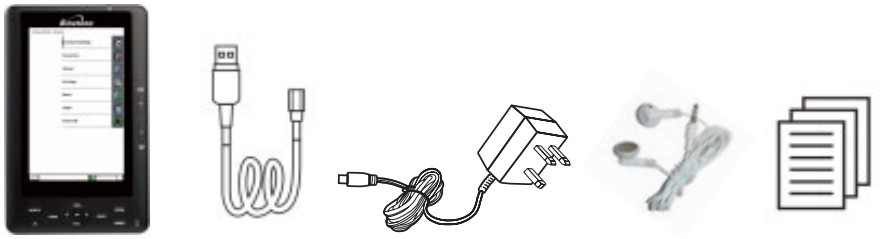

- Reader;
- USB cable (for data transfer);
- Power adaptor (for charging);
- Earphone (diameter: 2.5mm);
- User Guide.

6 OVERVIEW OF THE PRODUCT

6.1 Front

1 ZOOM **Zoom key**
In reading mode, press to adjust the text size of the page you are reading. There are 4 levels of zoom to choose from.

2 **Bookmark key**
In reading mode, press to access the bookmark menu (see *"Create Bookmarks" on page 28*).

3 ⊲ / ⊳ **Scroll keys**
Press to move to the previous file or next file in music library.
Press to move to the previous or next input field.

4	**VOL+ / VOL-**	**Volume keys** Press to increase or reduce volume.
5	**ROTATE**	**Page orientation key** In reading or picture mode, press to switch between portrait and landscape view.
6	**OK**	**OK/Confirm key** Press to confirm an operation or select an option from the options list. In music or video playback mode, press to start, pause or resume music playback.
7	**HOME**	**Home key** Press in any mode to go back to the main menu screen.
8	**MENU**	**Menu key** Press in reading mode to access the menu options.
9	**BACK**	**Back key** Press to cancel an operation. Press to exit from a sub menu and return to the previous menu.
10	**PAGE BACK ^/ PAGE FWD v**	**Navigation keys** Press to move to the previous or next page. Press to move the cursor up or down in menu mode.
11	**LED**	**Charge LED indicator** Red LED indicates charging.

6.2 Top and Bottom

1		**USB port** USB port for data transfer.
2		**Power key** Press for 2 seconds to power up the Reader. Press and hold to power down the Reader.
3	**SD**	**MicroSD memory card slot**
4	**DC5V**	**Power cable connector**
5		**Earphone jack**

6.3 Back

1 Speaker

2 RESET button
If the Reader malfunctions (screen freezes or keys stop responding), press the reset button using a pointed object to reset the device.
Press ⏻ to restart the Reader.

Table of contents

1 WELCOME 3

2 IMPORTANT 3

3 WHERE CAN I GET eBOOKS FOR MY READER? 3

4 WHAT IS DIGITAL EDITIONS? 4

4.1 Installing Digital Editions on your computer 4

4.2 Authorising Your Computer 7

5 WHAT'S IN THE BOX? 9

6 OVERVIEW OF THE PRODUCT 10

6.1 Front 10

6.2 Top and Bottom 11

6.3 Back 12

7 GETTING STARTED 15

7.1 Charging the Battery 15

7.2 Inserting a memory card 15

7.3 Removing a memory card 16

7.4 Switching the eBook Reader On/Off 16

7.5 Resetting the eBook Reader 17

8 USING README DAILY FOR THE FIRST TIME 17

8.1 Transferring files from your computer to the eBook Reader 17

8.2 Converting eBooks 20

9 USING THE eBOOK READER 21

9.1 What's on the display? 21

9.2 Basic menu operations 21

9.3 Reading an eBook 21

9.4 Other Operations in Reading mode 28

9.5 Create Bookmarks 28

9.6 View Bookmark list 29

9.7 Go to a Bookmark entry 29

9.8 Delete a Bookmark entry 29

10 CONTINUE READING 30

11 LISTENING TO MUSIC 30

11.1 Listen to music 30

11.2 Play music in the background 31

11.3 Listen to music using earphone 31

11.4 Operations in music player mode 31

12 WATCHING VIDEOS 32
12.1 Watch videos 32
12.2 Operations in video mode 32
13 SETTINGS 33
13.1 Brightness setting 33
13.2 Language setting 34
13.3 Automatic power off 34
13.4 Upgrade 35
13.5 Default settings 36
13.6 Format Device 37
13.7 Help 37
13.8 System Version 38
14 HELP/TROUBLESHOOTING 39
15 IF YOU NEED HELP... 40
16 SAFETY INSTRUCTIONS 40
17 REPLACING BATTERIES 41
18 CLEANING THE DEVICE 41
19 DISPOSAL OF THE DEVICE (ENVIRONMENT) 41
20 GUARANTEE AND SERVICE 42
21 TECHNICAL SPECIFICATIONS 42
22 DECLARATION OF CONFORMITY 43

7 GETTING STARTED

7.1 Charging the Battery

The rechargeable battery comes pre-installed within the Reader.

You can only charge the battery using the AC adapter.

7.1.1 Charging with the AC Power Outlet

1 Connect the supplied power adaptor to the charging port at the bottom of the eBook Reader and connect the other end to an AC power outlet.

2 The charge LED turns red to indicate charging.

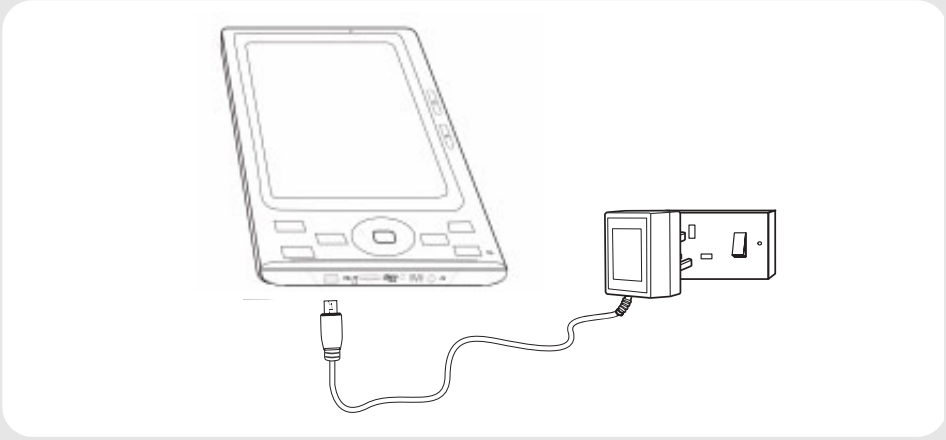

Note

It is normal for the Reader to build up heat while charging or after using for an extended period of time.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN UNAUTHORISED PERSON.

7.2 Inserting a memory card

The eBook Reader has a slot for MicroSD memory card.

Insert the memory card into the card slot with its label side down until it clicks into place.

Note
Do not insert an incompatible memory card as it may cause the Reader to malfunction.

7.3 Removing a memory card

Push in the memory card. The memory card will pop out from its slot.

Note
Do not insert or remove the memory card when the Reader is reading from the card or writing data to the card, as this may cause data corruption.

7.4 Switching the eBook Reader On/Off

7.4.1 Switching On

Press ⏻ and release when the screen flickers. The Binatone Ebook Reader LOGO appears before it enters the main menu interface.

7.4.2 Switching Off

From the main menu, scroll down to **Poweroff** and press **OK**, or press ⏻ (for about 5 seconds) until the screen shuts down.

7.5 Resetting the eBook Reader

Should the eBook Reader malfunction, such as the screen freezes or does not respond to any key presses, you can use the Reset button at the back of the Reader to restart it.

1. Insert a pointed object, like a ballpoint pen or a bent paper clip into the Reset Button slot on the back of the eBook Reader.
2. Press and hold the reset button for about 3 seconds.
3. Press ⏻ to restart the eBook Reader.

Note

Do not apply too much pressure on the reset button.

8 USING README DAILY FOR THE FIRST TIME

IMPORTANT

To ensure smooth operation of your eBook Reader, please charge it for at least 10 hours before using it for the first time.

8.1 Transferring files from your computer to the eBook Reader

Before you can start reading an eBook, enjoy music and videos on your Reader, you must first transfer them to the Reader.

You can transfer files from your computer to the Reader using USB connection or transfer the files to a MicroSD card first and then insert the memory card into the Reader.

8.1.1 Transfer files using USB connection

The eBook Reader must be switched on before you can establish a USB connection to your computer.

1. Press ⏻ to switch on the eBook Reader.

   The eBook Reader enters the main menu automatically.

2 Connect the eBook Reader to your computer using the supplied USB cable.

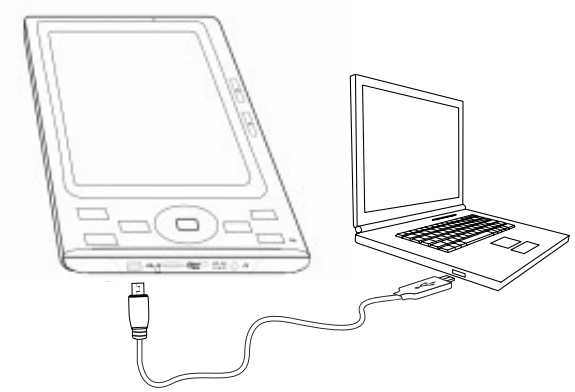

3 When successfully connected, the following is displayed on the Reader:

4 Select **OK** to confirm.

5 On your computer, select **Open folder to view files** and click **OK**.

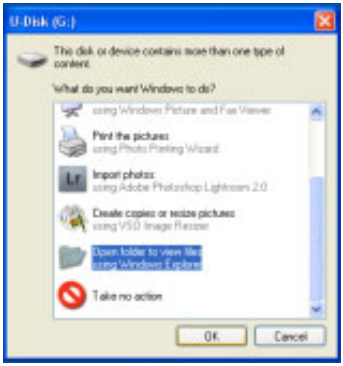
U-Disk (G:)
The disk or device contains more than one type of content.
What do you want Windows to do?
Print the pictures
Import photos
Create copies or resize pictures
Open folder to view files
Take no action
OK
Cancel

6 The U-Disk of the Reader will appear on your desktop.

7 Drag and drop the file(s) into the respective folders of the Internal Memory drive, or create a new folder in the Internal Memory drive.

8 Once the transfer is complete, press **OK** to disconnect the eBook Reader.

You are ready to start reading your eBook on your Reader (see ***"Reading an eBook" on page 21***).

8.1.2 Transfer files to a MicroSD card

1 Plug the MicroSD card into a card reader that is connected to your computer or a MicroSD card slot on your computer.

2 Once your computer has detected the MicroSD card, drag and drop the file(s) into the MicroSD card.

3 After you have transferred the file(s) into the MicroSD card, remove it from the card reader or MicroSD card slot on your computer, and insert it into the eBook Reader.

4 You are ready to start reading your eBook on your Reader (see ***"Reading an eBook" on page 21***).

8.2 Converting eBooks

The Reader supports eBooks in several formats, such as TXT, PDF, HTML, CHM, RTF, FB2, EPUB, WORD, TCR, PAML DOC., OPEN E-BOOK, OPEN READER and MOBI. If you have eBooks that are not in any of these formats, we recommend that you to use a freeware such as *calibre* to convert them into a supported format.

8.2.1 Using *calibre* for conversion

calibre is an eBook library application that helps you convert your eBooks into several formats that can be viewed with your eBook Reader. It is a **free** software. For more information on the usage of *calibre*, such as conversion settings, transferring and managing eBooks, please visit **http://calibre.kovidgoyal.net/user_manual/**.

Note

calibre will not convert eBooks that are DRM (Digital Rights Management) protected. For more advanced conversion options, please visit **http://calibre.kovidgoyal.net/user_manual/**.

Installing and setting up *calibre* on your computer

The *calibre* eBook software is provided on GNU General Public License Basis as per the details stated below.

calibre is Copyright 2008 by Kovid Goyal.

The software is provided under no warranty and for use on voluntary basis only.

Any problems arising from the use of the software are not by any means the responsibility of Binatone.

The latest software version and further information can be found on the Internet under **http://calibre-ebook.com/**.

It is recommended to use a memory card to transfer eBooks into the Reader using **Save to disk** command.

1 Download the application from the Internet **http://calibre.kovidgoyal.net/download**

2 The *Welcome Wizard* starts when you run *calibre* on your computer for the first time. Follow the instructions to set up *calibre* on your computer.

9 USING THE eBOOK READER

9.1 What's on the display?

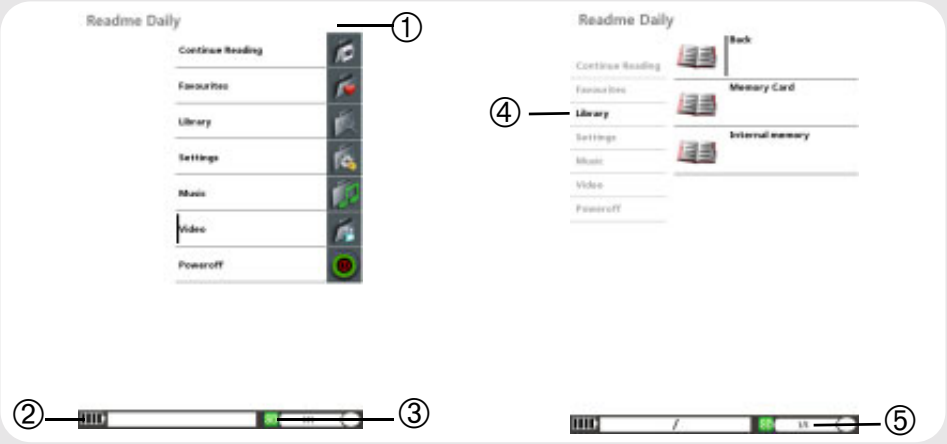

1 Main menu level

2 Battery level

3 Memory card status (**SD**: indicates that Memory card is in use)

4 Current menu status

5 Current page number

9.2 Basic menu operations

The eBook Reader enters the main menu automatically when powered up. The main menu displays the 7 menu functions in a list.

- To select a menu option, press **PAGE BACK ^ / PAGE FWD v** keys, until the black cursor is next to the option you want and press **OK** to enter.
- To go back to the previous menu, press **BACK**.
- To return to the main menu or cancel an operation, press **HOME**.

9.3 Reading an eBook

9.3.1 Selecting an eBook from the Library

1 From the main menu, press **PAGE BACK ^ / PAGE FWD v** to select **Library** and press **OK**.

A list of folders is displayed.

2 If you have inserted a memory card, press **PAGE BACK ^ / PAGE FWD v** to select the location that you have stored the eBook and press **OK**.

3 Press **PAGE BACK ^ / PAGE FWD v** to select the folder from which you wish to search for the eBook and press **OK** to enter.

4 Press **PAGE BACK ^ / PAGE FWD v** to select an eBook from the folder and press **OK** to enter reading mode to start reading the selected eBook.
If you have read the eBook before, the last page that you have stopped reading previously will be displayed.

Hint

You can also select **Continue Reading** from the main menu to display the last eBook that you have read. For more information, please refer to ***"CONTINUE READING" on page 30***.

9.3.2 Enlarge or Reduce text size

When reading an eBook, press **ZOOM** to enlarge or reduce text size. Press ◁ / ▷ to select a zoom level (original, small, medium, large, extra large) and press **OK** to confirm.

Note:

PDF files cannot support extra large zoom. If you select the largest zoom level, the display will automatically rotate to landscape view.

9.3.3 Switch between Portrait or Landscape view

When reading an eBook, press **ROTATE** to switch the page view to portrait or landscape. Each time you press **ROTATE**, the page switches its orientation vertically or horizontally.

9.3.4 Change Page Rotation

1 When reading an eBook, press **MENU.**

2 Select **Rotate** and press **OK**.

3 Select **Normal, Rotate90, Rotate180** or **Rotate270** and press **OK**.

9.3.5 Save to Favourites

1 When reading an eBook, press **MENU.**

2 Select **Favourite** and press **OK**.

3 Press **OK** to confirm.

9.3.6 Modify Font

Note

Font sizes and styles may be preset on some eBooks (for example PDF) and you cannot modify them.

1 When reading an eBook, press **MENU.**

2 Select **Font** and press **OK**.

3 Press **PAGE BACK ^ / PAGE FWD v** to select your preferred font and press **OK**.

The font sample is displayed at the bottom of the screen.

4 Press **PAGE BACK ^ / PAGE FWD v** to select font size.

The font size sample is displayed at the bottom of the screen.

5 Press **OK** to confirm your settings.

9.3.7 Modify Page Style

Note

Page styles may be preset on some eBooks and you cannot modify them.

1 When reading an eBook, press **MENU.**

2 Select **Style** and press **OK**.

3 Press ◁ / ▷ to select **Left Margin/Right Margin/Top Margin/Bottom Margin, Line Space** or **Alignment**.

4 Press **PAGE BACK ^ / PAGE FWD v** to adjust the respective settings.

5 Press **OK** to confirm your settings.

9.3.8 Goto a specific page number

1 When reading an eBook, press **MENU**.

2 Select **Goto Page** and press **OK**.

An options list is displayed.

3 Select **Goto Page** and press **OK**.

4 Press **^ / v / < / >** to select the corresponding number key(s) and press **OK**.
To erase an incorrect input, press ⓧ / ⓨ to select **Cancel** or **Backspace** and press **OK**.

5 Select **OK** and press **OK** to confirm.

9.3.9 Outline mode

Note

This option is only available for ebooks in PDF format.

1 When reading an eBook, press **MENU**.

2 Select **Outline** and press **OK**.

The chapters in the eBook are listed.

3 Press **PAGE BACK ^ / PAGE FWD v** to select a chapter and press **OK**.

The first page of the selected chapter is displayed.

9.4 Other Operations in Reading mode

The following operations can be performed in reading mode:

Operation	Key
Move to the previous page	**PAGE BACK ^** or **<**
Move to the next page	**PAGE FWD v** or **>**
Move to the first page	*1* Press **MENU**, select **GoTo Page** and press **OK**. *2* Select **First Page** and press **OK**.
Move to the last page	*1* Press **MENU**, select **GoTo Page** and press **OK**. *2* Select **Last Page** and press **OK**.
Return to the main menu	Press **MENU** or press **BACK** repeatedly.

9.5 Create Bookmarks

You can create a bookmark on a page so that you can return to it later. You can create up to 10 Bookmarks for each book.

1 When reading an eBook, press **BOOKMARK**.

2 Select **Add bookmark** and press **OK**.

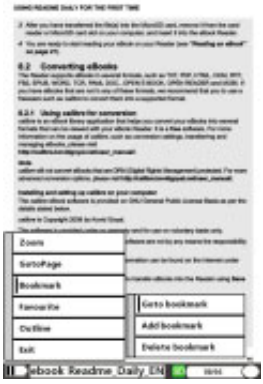

A bookmark that corresponds to the current page that you are reading is created.

3 To cancel, press **BACK**.

9.6 View Bookmark list

1 When reading an eBook, press **BOOKMARK**.

2 Select **Goto bookmark** and press **OK**.

A list of bookmarks is displayed.

9.7 Go to a Bookmark entry

1 When reading an eBook, press **BOOKMARK**.

2 Select **Goto bookmark** and press **OK**.

A list of bookmarks is displayed.

3 Select a bookmark and press **OK**.

The screen will automatically display the page that contains the bookmark entry.

9.8 Delete a Bookmark entry

1 When reading an eBook, press **BOOKMARK**.

2 Select **Delete bookmark** and press **OK**.

A list of bookmarks is displayed.

3 Select a bookmark and press **OK**.

The bookmark entry is deleted.

10 CONTINUE READING

Display the last eBook that you have read.

1 From the main menu, press **PAGE BACK ^ / PAGE FWD v** to select **Continue Reading** and press **OK**.

The eBook you have last read is displayed.

11 LISTENING TO MUSIC

You can play audio files on the eBook Reader.

IMPORTANT

To access music files from **Music** menu, you must store them in the *Music* directory on your memory card or internal memory of the Reader.

11.1 Listen to music

1 From the main menu, press **PAGE BACK ^ / PAGE FWD v** to select **Music** and press **OK**.

A list of audio files is displayed.

2 Press ◁ / ▷ to select an audio file and press **OK** to start playback.

Hint

When the selected song finished playing, the next song in the list will play automatically.

To pause or resume music playback, press **OK**.

11.2 Play music in the background

1 Press **BACK** during music playback. The music will continue to play in the background while you navigate to other menu functions.

Hint

The music player will stop automatically when you connect the eBook Reader to your computer via USB connection.

11.3 Listen to music using earphone

Simply connect the earphone to the earphone jack on the eBook Reader.

11.4 Operations in music player mode

The following operations can be performed during audio playback:

Operation	**Do this:**
Play/Pause music	Press **OK**
Volume adjustment	Press **VOL+ / VOL-**

Stop playback and return to the main menu	Press **HOME**.
Play music in the background	Press **BACK**.

12 WATCHING VIDEOS

You can view **H.264** and **MPEG-4** video files on the eBook Reader.

12.1 Watch videos

1. From the main menu, press **PAGE BACK ^ / PAGE FWD v** to select **Video** and press **OK**.
2. Press **PAGE BACK ^ / PAGE FWD v** to select a video and press **OK** to start playing the video.

Hint

Videos are automatically screened in landscape mode.

12.2 Operations in video mode

The following operations can be performed during video playback:

Operation	**Do this:**
Play/Pause video playback	Press **OK**
Fast backward or Fast forward	Press ⟨ / ⟩
Volume adjustment	Press **VOL+ / VOL-**
Stop playback and return to the main menu	Press **HOME** or **BACK**.

13 SETTINGS

13.1 Brightness setting

1 From the main menu, press **PAGE BACK ^ / PAGE FWD v** to select **Settings** and press **OK**.

2 Press **PAGE BACK ^ / PAGE FWD v** to select **Brightness** and press **OK**.

3 Press ⟨ / ⟩ to adjust screen brightness and press **OK** to confirm.

Hint
The brighter the backlight, the more battery power is consumed.

13.2 Language setting

1 From the main menu, press **PAGE BACK ^ / PAGE FWD v** to select **Settings** and press **OK**.

2 Press **PAGE BACK ^ / PAGE FWD v** to select **Language** and press **OK**.

3 Press **PAGE BACK ^ / PAGE FWD v** to select your preferred language and press **OK** to confirm.

13.3 Automatic power off

1 From the main menu, press **PAGE BACK ^ / PAGE FWD v** to select **Settings** and press **OK**.

2 Press **PAGE BACK ^ / PAGE FWD v** to select **Auto Poweroff** and press **OK**.

3 Press **PAGE BACK ^ / PAGE FWD v** to select an auto power off time and press **OK** to confirm.

If you select 10 Mins, the Reader will power off automatically after 10 minutes of inactivity. To disable auto power off, select **OFF** *and press* **OK** *to confirm.*

13.4 Upgrade

1 From the main menu, press **PAGE BACK ^ / PAGE FWD v** to select **Settings** and press **OK**.

2 Press **PAGE BACK ^ / PAGE FWD v** to select **Upgrade** and press **OK**.

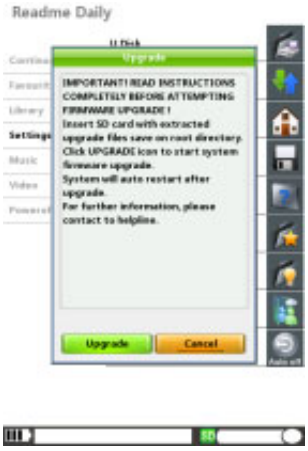
Readme Daily
U Disk
Upgrade
IMPORTANT! READ INSTRUCTIONS COMPLETELY BEFORE ATTEMPTING FIRMWARE UPGRADE !
Insert SD card with extracted upgrade files save on root directory.
Click UPGRADE icon to start system firmware upgrade.
System will auto restart after upgrade.
For further information, please contact to helpline.
Upgrade
Cancel

3 Read the upgrade warning carefully before performing upgrade.

4 Press ⟨ / ⟩ to select **Upgrade** and press **OK** to confirm. To cancel, select **Cancel** and press **OK**.

13.5 Default settings

1 From the main menu, press **PAGE BACK ^ / PAGE FWD v** to select **Settings** and press **OK**.

2 Press **PAGE BACK ^ / PAGE FWD v** to select **Default** and press **OK**.

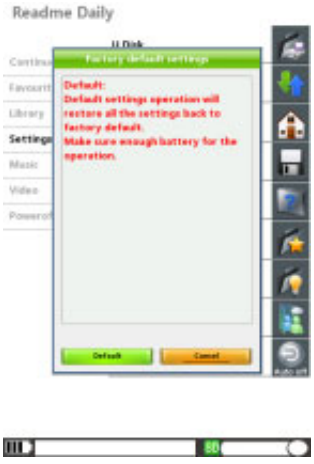

3 You will be asked to make sure that there is enough battery power to start the reset operation.

4 Press ◁ / ▷ to select **Default** and press **OK**. To cancel, select **Cancel** and press **OK**.

13.6 Format Device

Important

After formatting the device, please restore the Reader to its factory default settings by running a reset operation. Otherwise, malfunctions may occur and **Digital Editions** may fail to detect your Reader. To restore the Reader to default, see **"Default settings" on page 36**.

1 From the main menu, press **PAGE BACK ^ / PAGE FWD v** to select **Settings** and press **OK**.

2 Press **PAGE BACK ^ / PAGE FWD v** to select **Format** and press **OK**.

3 Select **Format** and press **OK** to confirm. To cancel, select **Cancel** and press **OK**.

13.7 Help

1 From the main menu, press **PAGE BACK ^ / PAGE FWD v** to select **Settings** and press **OK**.

2 Press **PAGE BACK ^ / PAGE FWD v** to select **Help** and press **OK**.

A User Guide of the Reader is displayed.

13.8 System Version

1 From the main menu, press **PAGE BACK ^ / PAGE FWD v** to select **Settings** and press **OK**.

2 Press **PAGE BACK ^ / PAGE FWD v** to select **System Info** and press **OK**.

3 Press **BACK** to exit.

14 HELP/TROUBLESHOOTING

The product is not working properly or locks up

Reset the Reader by pressing the RESET button at the back of the Reader using a pointed object. Press ⏻ for about 5 seconds to re-start the Reader.

There is no sound coming out from the Reader during audio playback

- Check that you have not set the volume to **Mute.** Press **VOL+** to increase volume;
- If you are using the earphone, check that the earphone plug has been properly inserted into the jack.

The eBook cannot be read

Check the format of the book. See **"**WHERE CAN I GET eBOOKS FOR MY READER?" on page 3 for the formats supported by the Reader.

The audio file cannot be played back

Check the format of the audio file.

The audio file cannot be found in the Music menu

Check the that you have stored the audio file in the Music directory on the memory card or internal memory of the Reader.

The video file cannot be played back

Check the format of the video file. See ***"WATCHING VIDEOS" on page 32*** for the formats supported by the Reader.

The Reader cannot be read on my Computer

- Check that you have turned on the Reader and confirmed the PC connection mode. See ***"Transfer files using USB connection" on page 17***;
- Check that you have properly connected the Reader to the computer with the USB cable; the Reader must be connected to the computer directly, and not through a USB or extension cable. If the problem persists, disconnect the USB cable from the Reader and reconnect.

Digital Editions cannot detect my Reader after I format the device

- Run a reset operation to restore your Reader to its factory default settings. See ***"Default settings" on page 36*** and ***"Format Device" on page 37***.

Files from the computer cannot be transferred to the Reader

- Check that the USB cable has been properly connected;

- There is not enough free space on the Reader. Transfer the files to a memory card or remove some files from the Reader to free up space.

The Reader did not start charging when connected to the computer

- You can only charge the Reader using the power adaptor; the USB socket cannot be used to charge the Reader.

The Reader did not start charging when connected to the AC power

- Check that the power cable has been properly connected. See ***"Charging the Battery" on page 15***.

The memory card cannot be recognised by the Reader

- Check the format and size of the memory card. See ***"TECHNICAL SPECIFICATIONS" on page 42*** for the formats and sizes supported by the Reader;
- Check that you have inserted the memory card correctly. See ***"Inserting a memory card" on page 15***.

Files cannot be transferred to the Memory Card

There is not enough free space on the memory card. Remove some files from the memory card to free up space.

15 IF YOU NEED HELP...

The Binatone Helpline is available from 9.00 am to 5.00 pm,
Mondays to Fridays, please call

0845 345 9677 for UK, 0818762092 for Eire (Local call rate)

16 SAFETY INSTRUCTIONS

- Please remove the earphones (not included) immediately when lightning occurs;
- Do not use the earphone at high volume to prevent hearing damage;
- Do not let the Reader come into contact with liquid. If it gets into water, switch off the Reader immediately as continuous use may cause fire or electric shock;
- Do not expose the Reader to extreme high temperatures or humidity;
- Electrical equipment can cause serious injury if you use it when you are wet or standing in water;
- Do not use the Reader near explosives or flammable gas as it may cause explosion;

• Do not let any metal or combustible materials get into the Reader through the memory card slot or USB slot, as this may cause fire or electric shock;

• The Reader is a precision electronic device. Handle it with care as the TFT screen may become damaged when dropped;

• Unauthorised disassembling of the Reader in any manner may damage the device, and is not covered by the warranty.

• Do not place the Reader close to anything with strong magnetic power. Strong magnets may cause malfunction to the Reader or the screen. In addition, do not use the Reader close to strong radio waves as this may damage the data in the Reader.

• Please insert the memory card correctly. If the memory card cannot be inserted, please check whether the Reader supports it or the card is inserted in the correct direction. Forced insertion may damage the Reader.

17 REPLACING BATTERIES

If you think the battery needs replacing, please call the Binatone Helpline:
0845 345 9677 for UK, 0818762092 for Eire (Local call rate)

18 CLEANING THE DEVICE

- Do not clean any part of the product with thinners or other solvents and chemicals - this may cause permanent damage to the product which is not covered by the warranty.
- When necessary, clean it with a damp cloth.
- Keep your product away from hot, humid areas or strong sunlight, and do not let it get wet.
- Every effort has been made to ensure high standards of reliability for your product. However, if something does go wrong, please do not try to repair it yourself - contact Customer Service for assistance.

19 DISPOSAL OF THE DEVICE (ENVIRONMENT)

At the end of the product lifecycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates this.

Some of the product materials can be re-used if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

20 GUARANTEE AND SERVICE

This product is guaranteed for 12 months from the date of purchase shown on your sales receipt. The Guarantee does not cover damage by misuse or negligence, or by excessive voltages — for example, lightning.

Please keep your sales (till) receipt — this is your guarantee. You should also keep the original packaging material.

21 TECHNICAL SPECIFICATIONS

External dimensions	219mm x 130mm x 12.5mm
Display screen	7-inch TFT display screen, resolution 800 x 480
Supported eBook formats	TXT, PDF, HTML, CHM, RTF, FB2, EPUB, WORD, TCR, PAML DOC., OPEN E-BOOK, OPEN READER, MOBI
Supported video formats	H.264, MPEG-4
Internal storage	2GB
Supported MicroSD card	up to 16GB
Built-in battery capacity	Li-polymer rechargeable battery 1100mAH
Speaker output	1W
Power supply	DC 5V
Operating temperature	0 - 40ºC
Storage temperature	0 - 40ºC

22 DECLARATION OF CONFORMITY

Hereby, BINATONE ELECTRONICS INTERNATIONAL LTD. declares that this eBook Reader is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

CE

Binatone
innovation imagination